




Fitting instructions for 4H-TECH® N-Shift Short Shifter.



This guide shows the fitment of the N-Shift on a Peugeot 206 with 1.4i engine. The same work does apply to all other engine and car versions for which the N-Shift can be used.

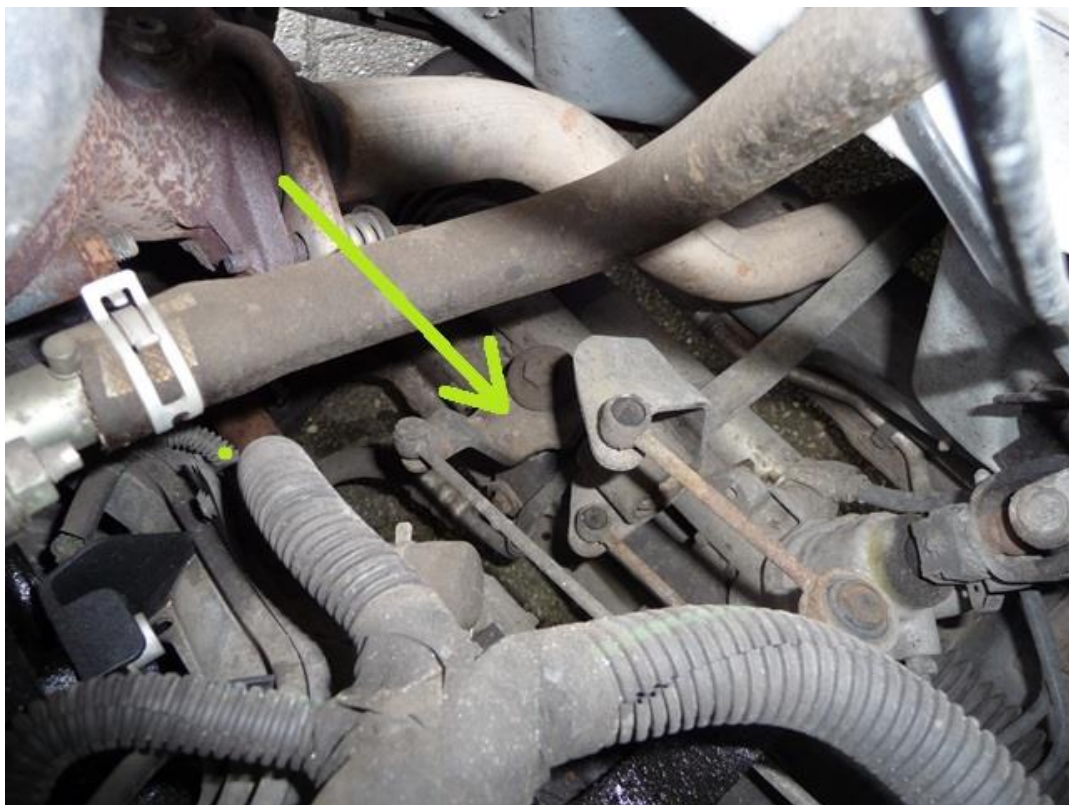



Use a 10mm spanner to unclip the shift bar from the bolt head.





**Unscrew the bolt which holds the OEM shifter. (use 16mm spanner)
Remove shifter arm and undo it from all components.**





Fit all parts on the new 4H-TECH shifter arm.



Grease up the new shifter joint, and fit it to the shift mechanism in the engine bay.



click the shift bar on new shifter by pressing it on the bolt head, and tighten the bolt with a 16mm spanner.

Make a test drive and check if all gears can be engaged. Enjoy 35% less gear throw and that lovely ``Klick-klack`` feeling. Now your car shifts like a racecar, but always remember to be safe and don't get overly excited on the public roads out there.

Protected Design. This Short Shifter is 100% developed, tested and produced by 4H-TECH®, and is protected under international copyright, trademark and other laws.

4H-TECH