




Fitting instructions for 4H-TECH® H4-Shift Short Shifter.



This guide shows the fitment of the H4-Shift on a Peugeot 206 with 1.9D engine. The same work does apply to all other engine and car versions.

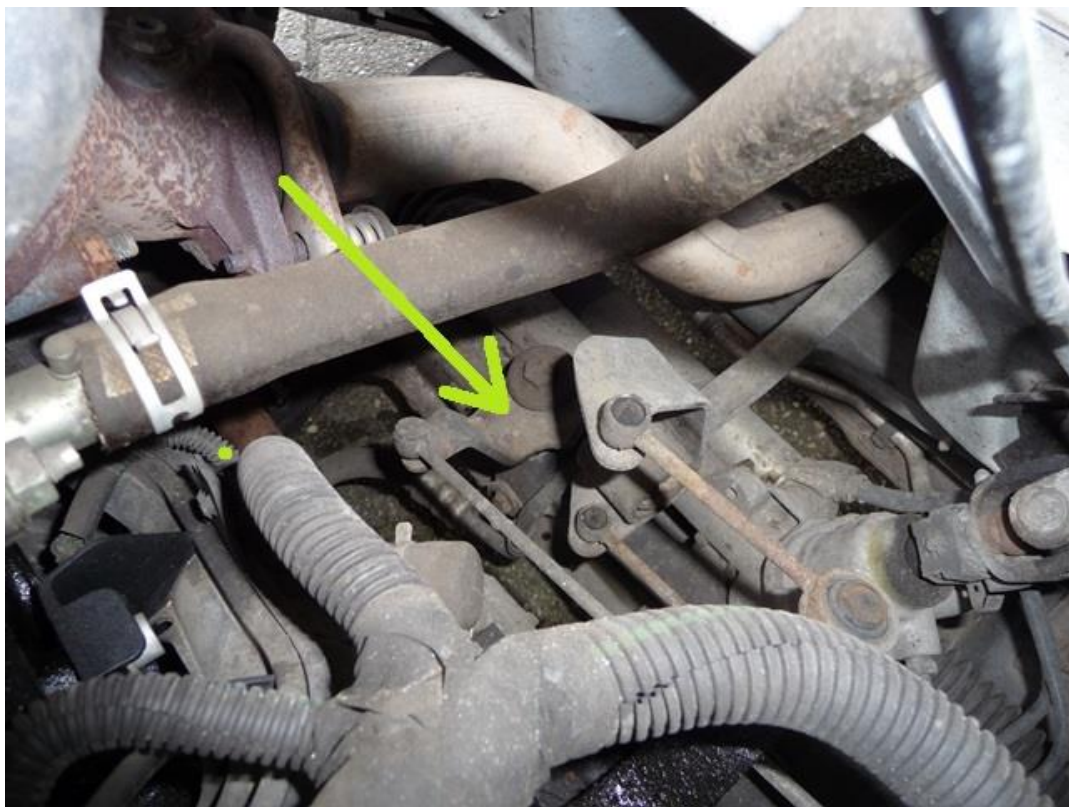



Use a 10mm spanner to unclip the shift bar from the bolt head.





**Unscrew the bolt which holds the OEM shifter. (use 16mm spanner)
Remove shifter arm and undo it from all components.**





Fit all parts on the new 4H-TECH shifter arm.





Grease up the new shifter joint, and fit it to the shift mechanism in the engine bay.





Make a test drive and check if all gears can be engaged. Enjoy 35% less gear throw and that lovely ``Klick-klack`` feeling. Now your car shifts like a racecar, but always remember to be safe and don't get overly excited on the public roads out there.

Protected Design. This Short Shifter is 100% developed, tested and produced by 4H-TECH®, and is protected under international copyright, trademark and other laws.

4H-TECH